




- Use external braking resistor
Connect the braking resistor to the P+ and C terminals, and remove the P+ and D short circuits;


P0-25=power value, P0-26=resistance value

External regenerative resistance : (recommended resistance value)	80Ω -100Ω
Minimum resistance : (no less than this value)	80Ω
External regenerative resistance : (recommended power value)	Above 200W

- This model has no braking resistance.

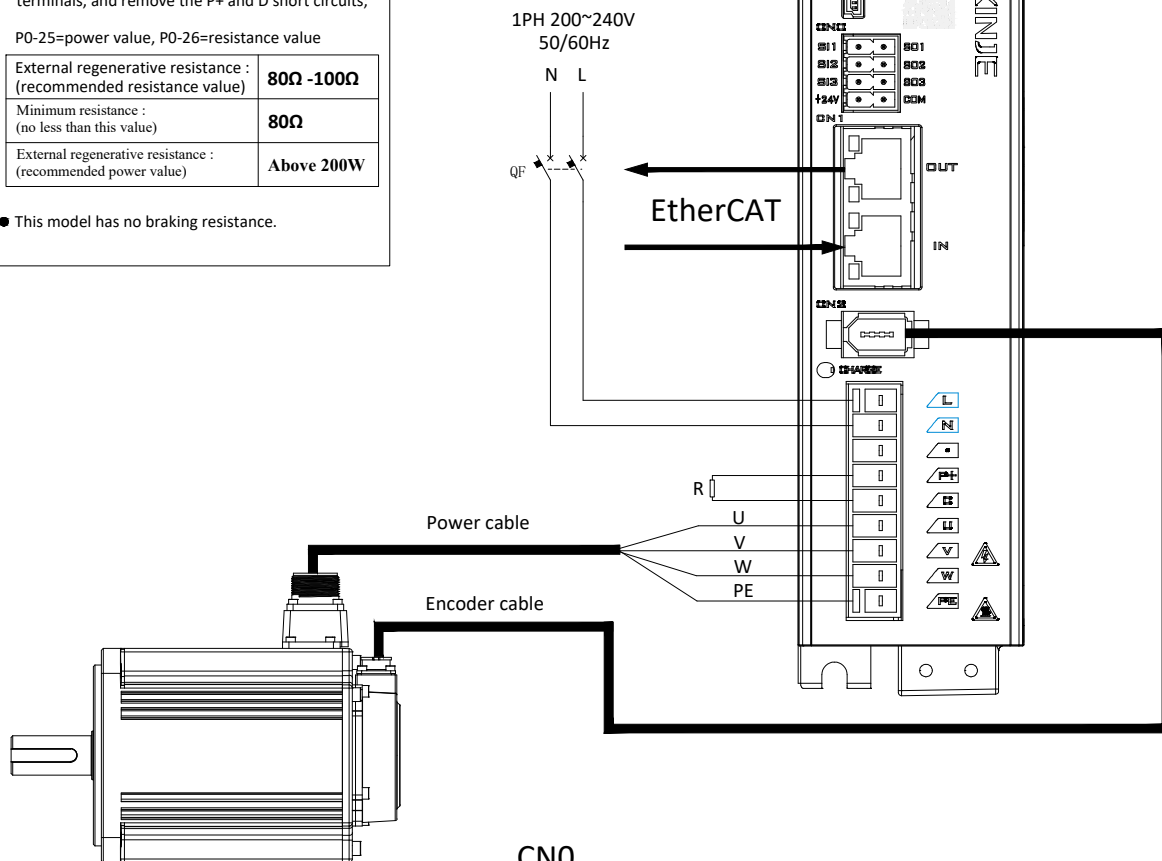

- For drivers rated at 750W or less, S11 and S12 are high-speed SI inputs, while S13 is a low-speed input; only NPN configuration is supported.
- Typical voltage DC24V, minimum not lower than DC18V, maximum allowable voltage not higher than DC28V.

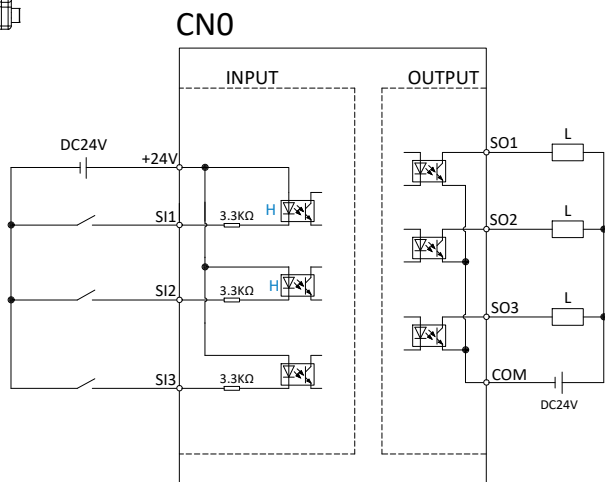

- SO1 DC 500 mA (max), SO (others) DC 50 mA (max). Because the current required to engage the brake is relatively high, when controlling the brake motor directly via SO, please use the SO1 terminal and set the brake parameter P5-44 to 0.0001.
- For drivers rated at 7.5 kW or less, SO1, SO2, and SO3 support only the NPN configuration.



- If the STO function is not required, please connect the STO1 and STO2 terminals to the 24V terminal.
- The maximum allowed cable length between the driver and the safety switch is 30m.

