

XINJE

DS5C2-22P3-PTA servo drive wiring diagram

Product Selection Support
Email : xinje3858@163.com



- If using a single-phase power supply, connect to L1/L3; otherwise, a power outage will affect parameter retention.




- Use external braking resistor
Connect the braking resistor to the P+ and C terminals, and remove the P+ and D short circuits;


P0-25=power value, P0-26=resistance value

External regenerative resistance : (recommended resistance value)	30Ω -50Ω
Minimum resistance : (no less than this value)	30Ω
External regenerative resistance : (recommended power value)	Above 1000W

- Use built-in braking resistor
Short circuit P+ and D terminals, disconnect P+ and C , built-in brake unit : 80W50Ω

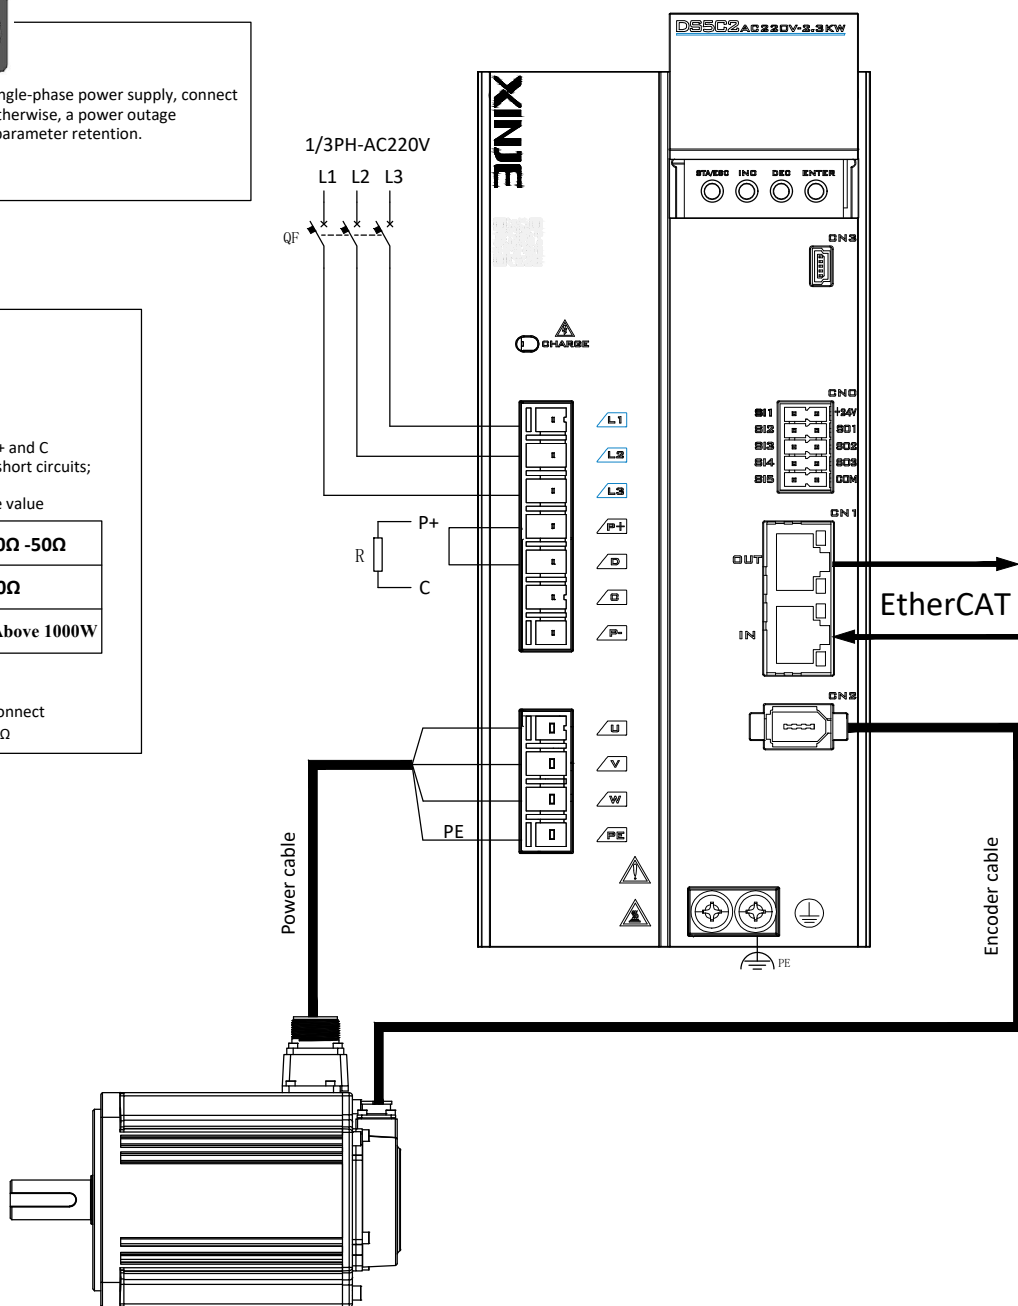

CN0

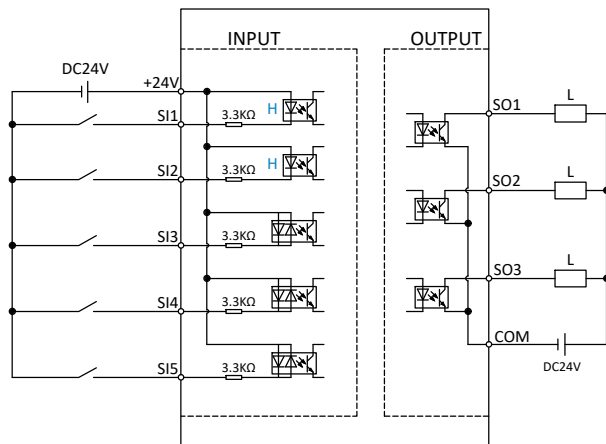

- SO (all) DC 50mA (maximum), supporting 24VDC, with a maximum of 30VDC. The required current for the brake is relatively high. When controlling the brake motor through SO, please use an intermediate relay
- For drivers rated at 7.5 kW or less, SO1, SO2, and SO3 support only the NPN configuration.



- The SI1 and SI2 channels of the 1~7.5kW driver are high-speed SI inputs with a response speed of less than or equal to 2μs, and only support NPN connection; SI3, SI4, and SI5 are low-speed SI inputs with a response time of less than or equal to 2ms. They support both NPN and PNP connections (SI1 to SI5 can only be NPN or PNP at the same time);

- Typical voltage DC24V, minimum not lower than DC18V, maximum allowable voltage not higher than DC28V.